


v8 cyclone

Dyson V8 Cyclone logo

User manual

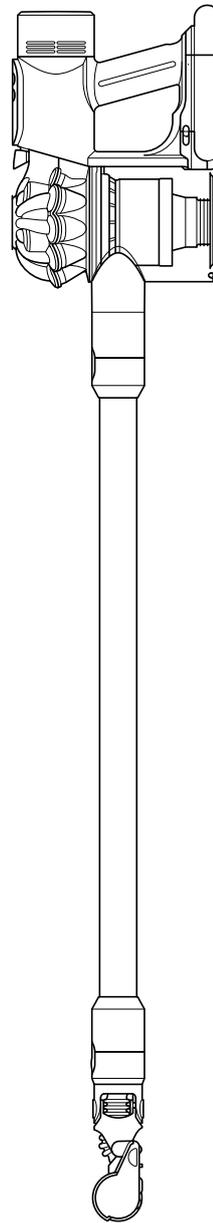

The Dyson V8 Cyclone cordless vacuum cleaner with the wand and cleaner head attached.

SV12 JN.00000 PN.000000-00-00
00.00.00 VERSION NO.01

Contents

In the box

Caring for your floors

Getting started

Charging your machine

Emptying your bin

Cleaning your bin

Clearing blockages

Washing the Pre-filter

Washing the Post-filter

Washing your soft roller cleaner head

Clearing blockages from your

Mini motorised tool


Cleaning the tools

Looking after your machine

v8 cyclone

Dyson V8 Cyclone logo

User manual

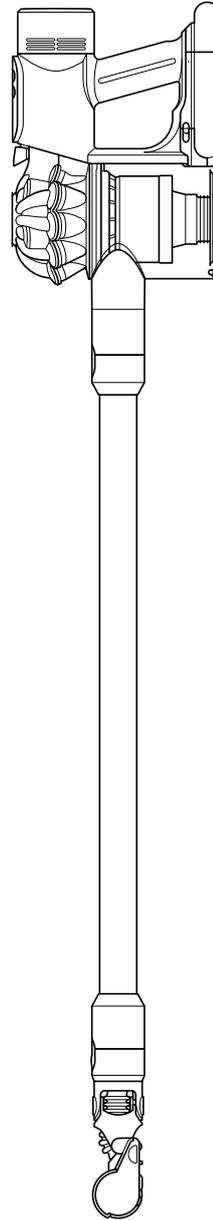

The Dyson V8 Cyclone cordless vacuum cleaner with the wand and cleaner head attached.

SV12 JN.00000 PN.000000-00-00
00.00.00 VERSION NO.01

Contents

In the box

Caring for your floors

Getting started

Charging your machine

Emptying your bin

Cleaning your bin

Clearing blockages

Washing the Pre-filter

Washing the Post-filter

Clearing obstructions from your

Motorbar™ cleaner head

Clearing blockages from your

Mini motorised tool

Cleaning the tools

Looking after your machine

dyson


Dyson logo

In the box

Your machine is boxed in 2 parts:

1. Machine body
2. Cleaner head/tools


Main body showing the handle and bin attached.

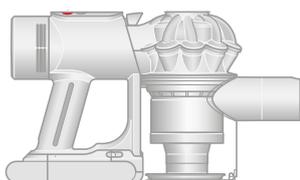

Machine body


Simply attach the cleaner head or tool to the front end of the main body or wand.

The Soft roller head

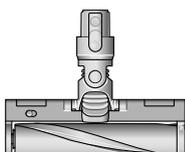

Soft roller head

 The Mini motorised tool



Mini motorised tool

The Crevice tool



Crevice tool



Wand

The wand is a tube with electrical connectors on both ends to allow tools to connect to the machine.

The charger can be used independently or as part of the dock.

The dock holds and charges your vacuum.



Charger



Dock

Caring for your floors

Check that the underside of the cleaner head or tool is clean and free from any objects that may cause damage.

Before vacuuming your flooring, rugs, and carpets, check the manufacturer's recommended cleaning instructions.

The brush bar on your cleaner head, or motorised tool, can damage certain flooring. Some rug materials may fuzz if a rotating brush bar is used when vacuuming. If this happens, we recommend vacuuming without the


motorised floor tool and consulting with your flooring manufacturer.

In the box

Your machine is boxed in 2 parts:

1. Machine body
2. Cleaner head/tools


Main body showing the handle and bin attached.

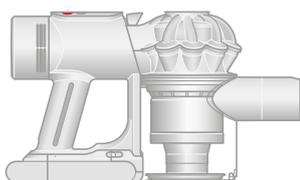

Machine body


Simply attach the cleaner head or tool to the front end of the main body or wand.

The Motorbar cleaner head

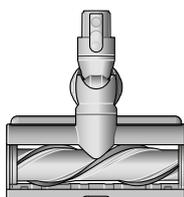

Motorbar cleaner head

 The Mini motorised tool



Mini motorised tool

The Crevice tool



Crevice tool



Wand

The wand is a tube with electrical connectors on both ends to allow tools to connect to the machine.

The charger can be used independently or as part of the dock.

The dock holds and charges your vacuum.



Charger



Dock

Caring for your floors

Check that the underside of the cleaner head or tool is clean and free from any objects that may cause damage.

Before vacuuming your flooring, rugs, and carpets, check the manufacturer's recommended cleaning instructions.


The brush bar on your cleaner head, or motorised tool, can damage certain flooring. Some rug materials may fuzz if a rotating brush bar is used when vacuuming. If this happens, we recommend vacuuming without the

motorised floor tool and consulting with your flooring manufacturer.

Getting started

Operating your machine

There are two easy-to-use buttons on the machine. The top button turns your vacuum on and off, while the lower button changes power mode.

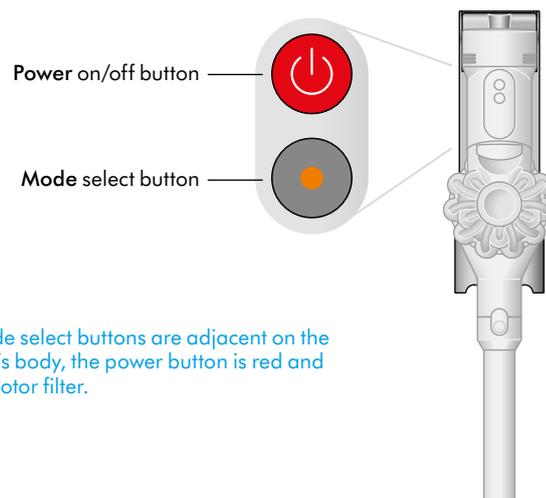

The Power and Mode select buttons are adjacent on the top of your vacuum's body, the power button is red and closer to the post-motor filter.

Three power modes

You can cycle between three power modes, depending on floor type and the level of suction needed, using the Mode button.

Eco mode: For longer, lighter cleans

Medium mode: For regular cleaning

Boost mode: For stronger suction



Eco



The Eco logo, a tall green battery



Med



The Med logo, a medium-size blue battery




Boost



The Boost logo, a short red battery

Clean awkward spaces

Remove the wand and connect your chosen tool directly to the inlet pipe to use the vacuum as a handheld.

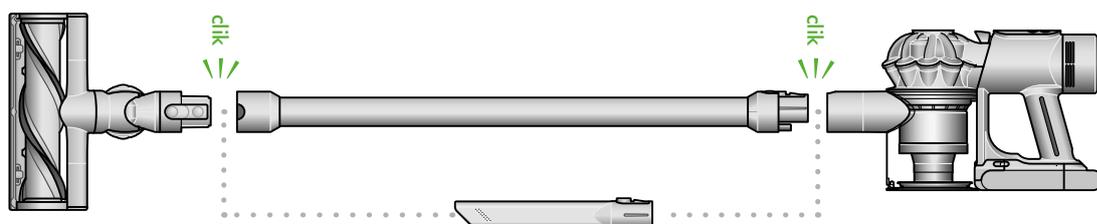


Tools and cleaner heads can be attached either to the wand or directly to the main body of your vacuum. If using the wand, it must also be connected to the main body of your vacuum.

Charging your machine

Fully charge your machine before your first use. Connect to the charger either directly or in the dock.

A full charge will take approximately 4 hours. While your battery is charging, the LED will flash to demonstrate the level of charge. Once your machine is fully charged, the light will turn off.

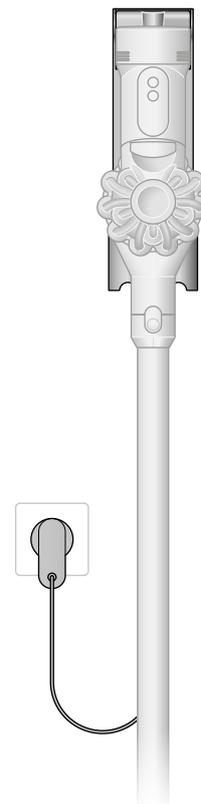

Battery LED

	Pulsing blue	Machine is charging
	No light	Machine is fully charged
	Flashing blue	Battery fault


Machine LED (Mode button)

	Solid blue, green or red	Normal operation
	Flashing blue, green or red	Battery low
	No light	Battery empty
	Solid orange light	Motor fault
	Flashing orange light	Incompatible tool
	Flashing white light	Cyclone not fitted correctly

The Dyson V8 Cyclone cordless vacuum cleaner being charged

Changing your battery


Push the Battery release button on the handle and slide the battery off your machine. Align your second battery with the handle and slide it in. Push firmly until it clicks into place.

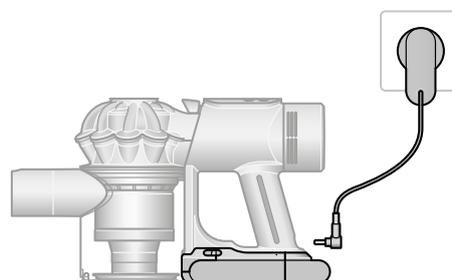

The battery is mounted below the handle of your vacuum.

Emptying your bin

Empty as soon as the dirt reaches the top level – don't overfill. Using your machine when the dirt is above the top line may affect the performance and require more frequent filter washing.

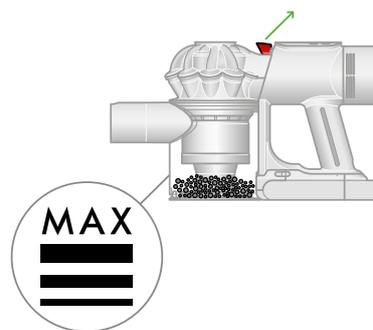


The top mark on the bin of the machine with a red X showing that the dirt exceeds this mark. The bin release button is next to the cyclones on the top of your vacuum.

Release the dirt

Remove the wand from your machine.


Hold your machine over a bin and pull the bin release catch upwards. The cyclone will slide up and the bin base will open.

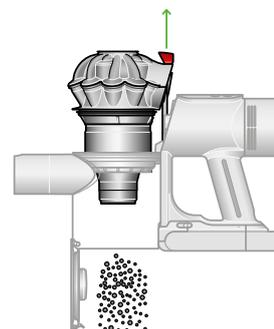

The bin of the machine is emptied into a bag by sliding down away from the cyclone.

Minimise dust contact


Cover your bin tightly in a dust-proof bag while you empty. Remove the bin carefully, seal the bag tightly and dispose.

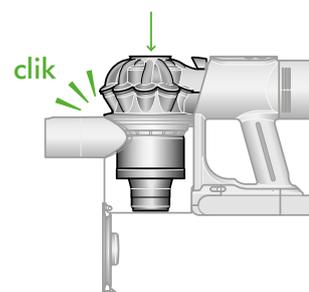

The bin of the machine is closed with a click, then the bin is pushed upwards until it clicks into place.

Close the bin

Push down on the cyclone until it slides into position. Push the bin base upwards until it closes securely.

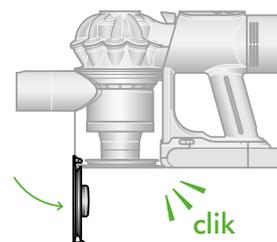

Cleaning your bin


Empty your bin as soon as the dirt reaches the top mark.

You may need to clean the filter more often if you use your machine with a full bin.

Empty your bin

Remove the wand from your machine.

Hold your machine over a bin and pull the bin release catch upwards. The cyclone will slide up and the bin base will open.

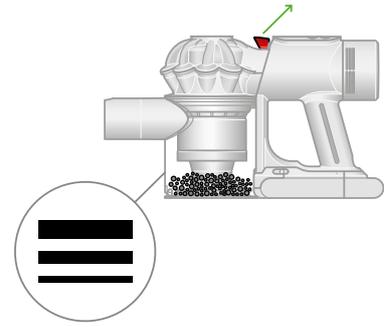


The bin of the Dyson V8 Cyclone vacuum is full.

Remove the cyclone

Pull the bin release catch upwards. The cyclone will slide up and the bin base will open.


Locate the cyclone release button behind the cyclone and push to remove the cyclone from your machine.

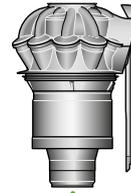

The cyclone being moved to reveal the release button, the release button is pushed to remove the cyclone.

Remove the bin

Pull back on the red catch located on the base, slide the bin down and pull it off your machine.

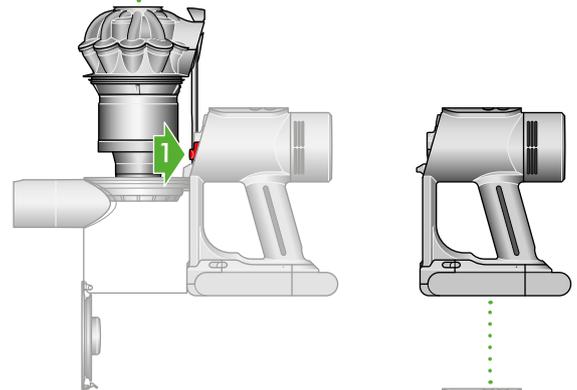

Clean the bin


Wipe your bin with a damp, lint-free cloth. Don't put the bin in a dishwasher or use detergents, polishes or air fresheners.

Make sure the bin is completely dry before replacing.

The release catch being pulled to remove the bin.

Replace the bin

Align the tabs on the bin with the grooves on the main body and slide it upwards until it clicks into place.

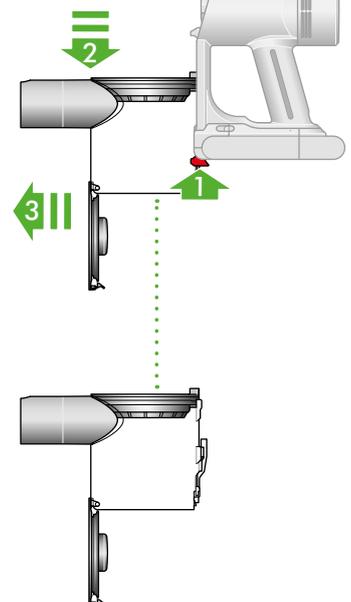

Replace the cyclone

Slide the cyclone into the grooves of the main body and push down until it is in position.

Push the bin base up until it clicks firmly shut.


Clearing blockages

Your machine is fitted with an automatic cut-out. If any part of it is blocked, your machine's motor will pulse and won't function until the blockage has been cleared.


Disconnect your machine from the charger before looking for blockages. Be careful not to touch the trigger and be aware of sharp objects.

Leave your machine to cool down before looking for blockages.

Don't use your machine when looking for blockages as this could cause injury.

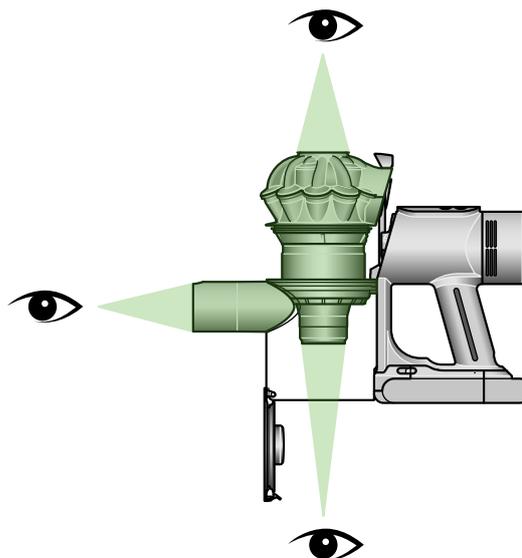

 With the bin open, examine your vacuum for blockages. Pay particular attention in and around the cyclones and the tool/wand attachment point.




With the wand removed from the machine and cleaner head removed from the wand, check for blockages at both ends of the wand. Turn the cleaner head over to check for obstructions on the brush bar and air inlet. Remove any obstructions.

Washing the Pre-filter

Remove your filter

Lift the filter out of the top of the cyclone.

Tap to remove excess dust and debris.

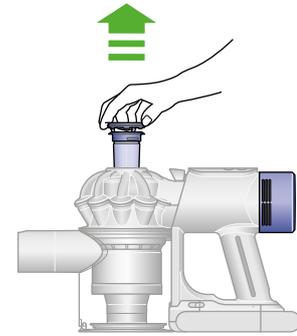

The Pre-filter is washed under running water.

Wash your filter

Hold the open end of the filter under a running tap, until the water runs clear.

Turn the filter upside down and tap it to remove excess water.

Run water over the outside of the filter until the water runs clear.

Squeeze and twist with both hands to make sure the excess water is removed.




The Pre-filter air drying.

Dry your filter


Leave your filter to dry for at least 24 hours in a well-ventilated, warm place.

Do not dry your filter in a tumble-dryer or near a naked flame.

Important: your filter must be completely dry before you put it back into the machine. Your machine could be damaged if used with a damp filter.

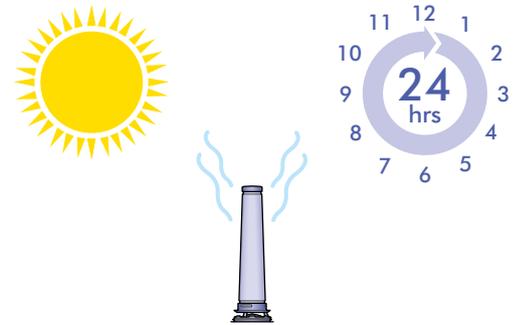


Caution: ensure your filter is fully dry before reinserting to the cyclone.

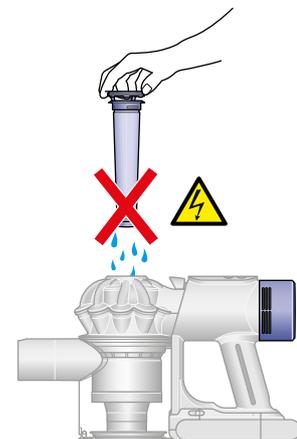

Refit your filter

Align the arrow on the top of the filter with the bin release button.

Push down to fit securely in place.

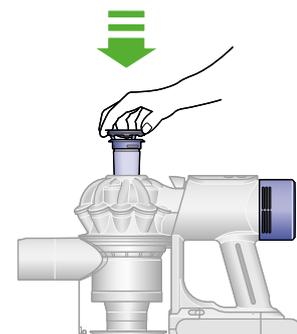


The Pre-filter being placed into the cyclone, as it's now dry

Washing the Post-filter

Twist off your filter

Twist your filter anti-clockwise and pull it away from your machine.

The Post-filter is removed from the back of the machine, above the handle.

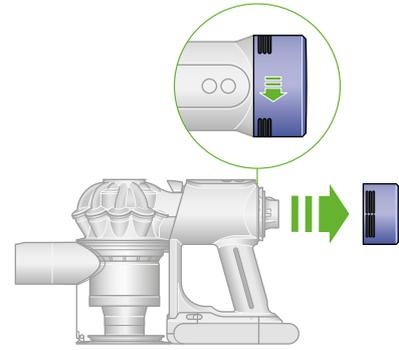

Wash your filter

Wash the inside of the filter under cold, running water, rotating the filter to make sure all of the inside is clean.


Repeat until the water runs clear.

Shake out the water

Empty the filter and shake firmly to remove excess water.

Keep shaking it until there's no water coming from the filter.

The Post-filter is shaken to remove excess water

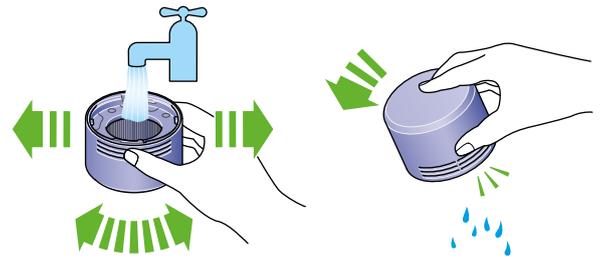

Dry your filter


Place your filter, with the open end facing up, to dry.

Leave your filter to dry for at least 24 hours in a well-ventilated, warm place.

Do not dry your filter in a tumble-dryer or near a naked flame.

Important: your filter must be completely dry before you put it back into the machine. Your machine could be damaged if used with a damp filter.

The Post-filter is air dried

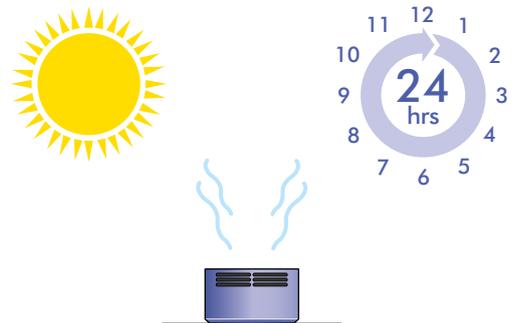


Caution: ensure your filter is fully dry before reinserting to the cyclone.

Replace your filter

Place your filter on your machine, aligned in the open position.

Twist clockwise until it clicks securely into position.

The Post-filter being placed into the machine, as it's now dry.

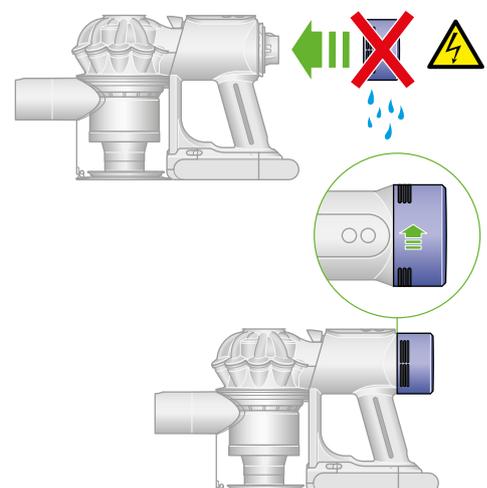

Clearing obstructions from your Motorbar™ cleaner head

Your Motorbar™ cleaner head doesn't have a washable brush bar. To maintain optimum performance, check your brush bar regularly and clear any obstructions.

Make sure your machine is disconnected from the charger and take care not to touch the power button.

Remove your brush bar

Don't put any part of your machine in a dishwasher or use detergents, polishers or air fresheners.

Press the cleaner head release button on the end of the wand. Place the cleaner head upside down.

Use a coin to unlock the end cap.

Twist the end cap and remove it from your brush bar. Don't wash the end cap.

Slide your brush bar out of the cleaner head.

Look for obstructions

Clear any debris from your brush bar.

Check inside the cleaner head and remove any debris or blockages.

Your Motorbar™ cleaner head and brush bar aren't washable. Wipe over with a damp lint-free cloth.

Replace your brush bar



Push the end cap back on to your brush bar and slide it back into the cleaner head.

Turn the end cap clockwise into the locked position.

Your cleaner head isn't washable and should only be wiped over with a damp lint-free cloth.



With the cleaner head removed from your vacuum, rotate the end cap anticlockwise to unlock. The brush bar is removed from the cleaner head.

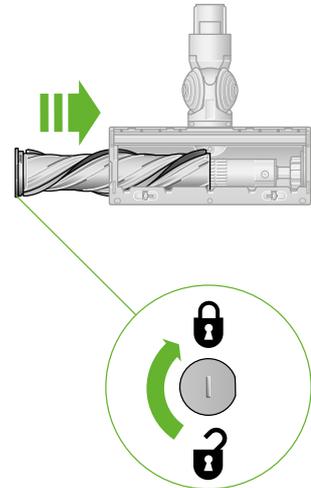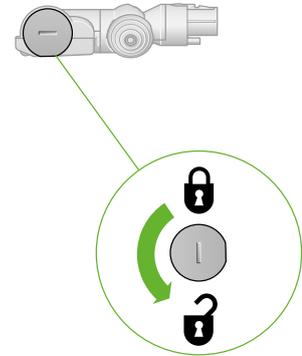

Reinsert the brush bar to your cleaner head and turn the end cap clockwise to lock.

Washing your soft roller cleaner head

Your Fluffy™ cleaner head has a washable brush bar. To maintain optimum performance, check and wash your brush bar regularly.

Make sure your machine is disconnected from the charger and take care not to touch the power button.



Remove your brush bar

Don't put any part of your machine in a dishwasher or use detergents, polishes or air fresheners.

Press the cleaner head release button on the end of the wand. Place the cleaner head upside down.

Push the end cap up fully and pull the brush bar out of the cleaner head.

Remove the end cap from the brush bar. Don't wash the end cap.

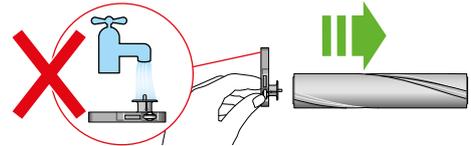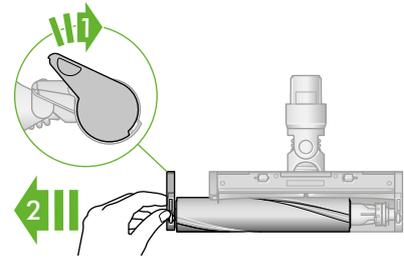


The end cap is located at the side of the cleaner head, push this upwards to unlock the brush bar. Don't wash the end cap.

Wash and dry your brush bar

Hold your brush bar under running water and gently rub to remove any lint or dirt.

Remove as much excess water as possible, run your hand down the length of the brush bar to squeeze out the water.

Stand your brush bar upright, with the closed end at the top. Leave to dry completely for at least 24 hours.

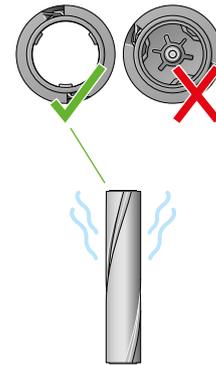

The brush bar has an open end and a closed end. Stand upright, with the closed end facing upwards to dry.


The brush bar reinserted into the cleaner head and the end cap rotated to the locked position

Replace your brush bar

Before replacing, check that your brush bar is completely dry.

Reattach the end cap to your brush bar.

Slide your brush bar into the cleaner head. Push the end cap back down to the closed position.

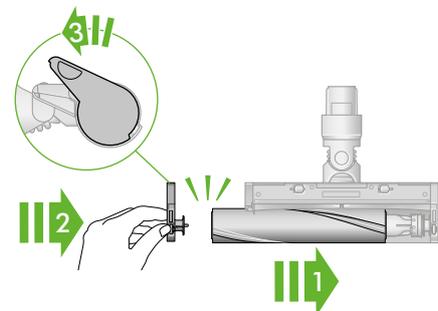

The end cap should be attached to the cleaner head at an angle less than 90°, any angle greater than this will not allow the end cap to close.

Clearing blockages from your Mini motorised tool

Your Mini motorised tool doesn't have a washable brush bar. To maintain optimum performance, check your brush bar regularly and clear any obstructions.

Make sure your machine is disconnected from the charger and take care not to touch the power button.

Remove your brush bar

Don't put any part of your machine in a dishwasher or use detergents, polishers or air fresheners.

Use a coin to unlock the end cap.

Twist the end cap and remove it from your brush bar. Don't wash the end cap.

Slide your brush bar out of the cleaner head.

Look for obstructions

Clear any debris from your brush bar.

Check inside the cleaner head and remove any debris or blockages.


Your Mini motorised tool and brush bar aren't washable. Wipe over with a damp lint-free cloth.

Replace your brush bar


Push the end cap back on to your brush bar and slide it back into the cleaner head.

Turn the end cap clockwise into the locked position.


Your cleaner head isn't washable and should only be wiped over with a damp lint-free cloth.

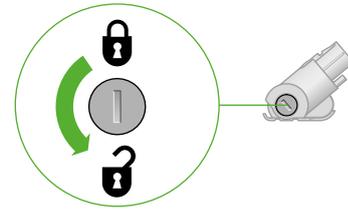

Twist the end cap anti-clockwise to remove it from the brush bar.

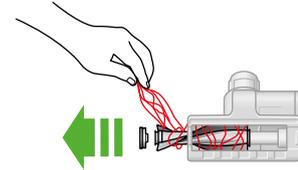

Tangled hair being removed from the brush bar.

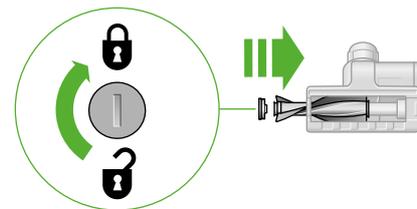

Twist the end cap clockwise to lock it to the brush bar.

Cleaning your tools

Don't put any part of your machine in a dishwasher or use detergents, polishes or air fresheners.

Wipe with a damp, lint-free cloth, without touching the connector end.

Make sure your tools are completely dry before using.

 
Crevice tool

Do not wash any cleaner head or motorised tool. They contain electronic components that could be compromised by exposure to water, detergents, polishes or air fresheners.



Crevice tool

Do not wash any cleaner head or motorised tool. They contain electronic components that could be compromised by exposure to water, detergents, polishes or air fresheners.



Mini motorised tool

The Mini motorised tool with an X next to it to signify it is not washable.

Cleaning your tools

Don't put any part of your machine in a dishwasher or use detergents, polishes or air fresheners.

Wipe with a damp, lint-free cloth, without touching the connector end.

Make sure your tools are completely dry before using.


Crevice tool

Do not wash any cleaner head or motorised tool. They contain electronic components that could be compromised by exposure to water, detergents, polishes or air fresheners.




Crevice tool

Do not wash any cleaner head or motorised tool. They contain electronic components that could be compromised by exposure to water, detergents, polishes or air fresheners.

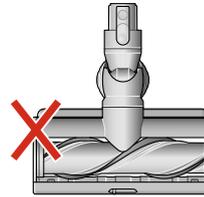

Motorbar cleaner head

 The Motorbar cleaner head with an X next to it to signify it is not washable.



Mini motorised tool

The Mini motorised tool with an X next to it to signify it is not washable.

Looking after your machine

To always get the best performance from your machine, it's important to clean it regularly and check for blockages.

Day-to-day machine care

To get the best performance from your machine, it's important to clean it regularly.

If your machine is dusty, wipe with a damp lint-free cloth.

Look after your battery

For best performance and battery life, only use MAX mode when needed.

Your battery is designed to charge on the dock and stops charging when complete, so returning the machine to the dock after use helps to maintain battery life.

Your machine won't operate or charge if the ambient

temperature is below 5°C (41°F). This is designed to protect both the motor and battery.

Where to find your machine's serial number

The serial number is printed on the main body of the machine, behind the back of the clear bin.

Use the serial number to register your machine.

For more information and support videos for your machine, go online: www.dyson.com/support