


supersonic travel

Dyson supersonic travel logo

User manual

Dyson Supersonic Travel hair dryer

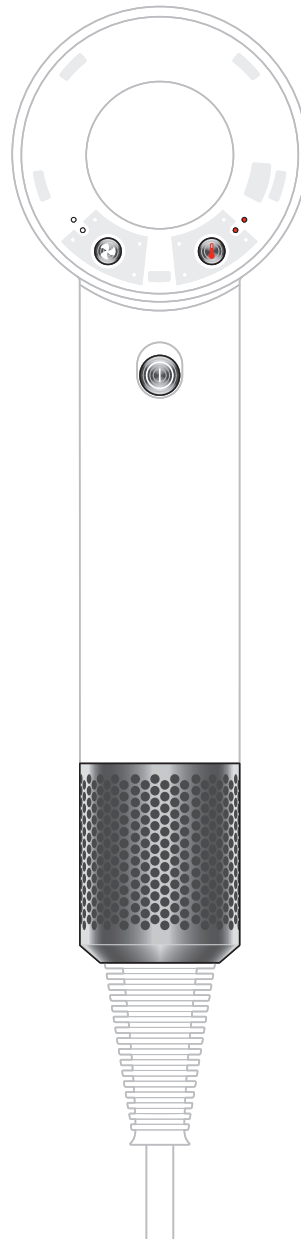

SV12 JN.00000 PN.000000-00-00
00.00.00 VERSION NO.01

Contents

In the box

Getting started

LEDs

Using your travel hair dryer


Regular filter maintenance

Support and service


dyson

Dyson logo

In the box

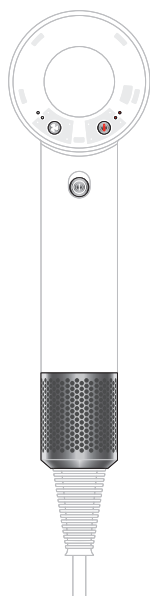

Dyson Supersonic™
Travel hair dryer

 


Styling concentrator

Compatible with Dyson Supersonic Nural™
and Dyson Supersonic™ hair dryer attachments.

You can buy additional attachments at [Dyson.com](https://www.dyson.com).

In the box

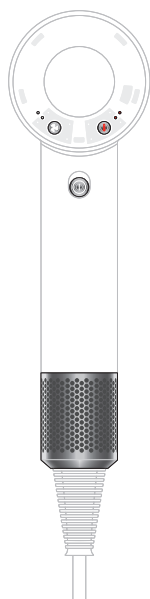

Dyson Supersonic™
Travel hair dryer




Smoothing nozzle

Compatible with Dyson Supersonic Nural™
and Dyson Supersonic™ hair dryer attachments.

You can buy additional attachments at [Dyson.com](https://www.dyson.com).

Getting started

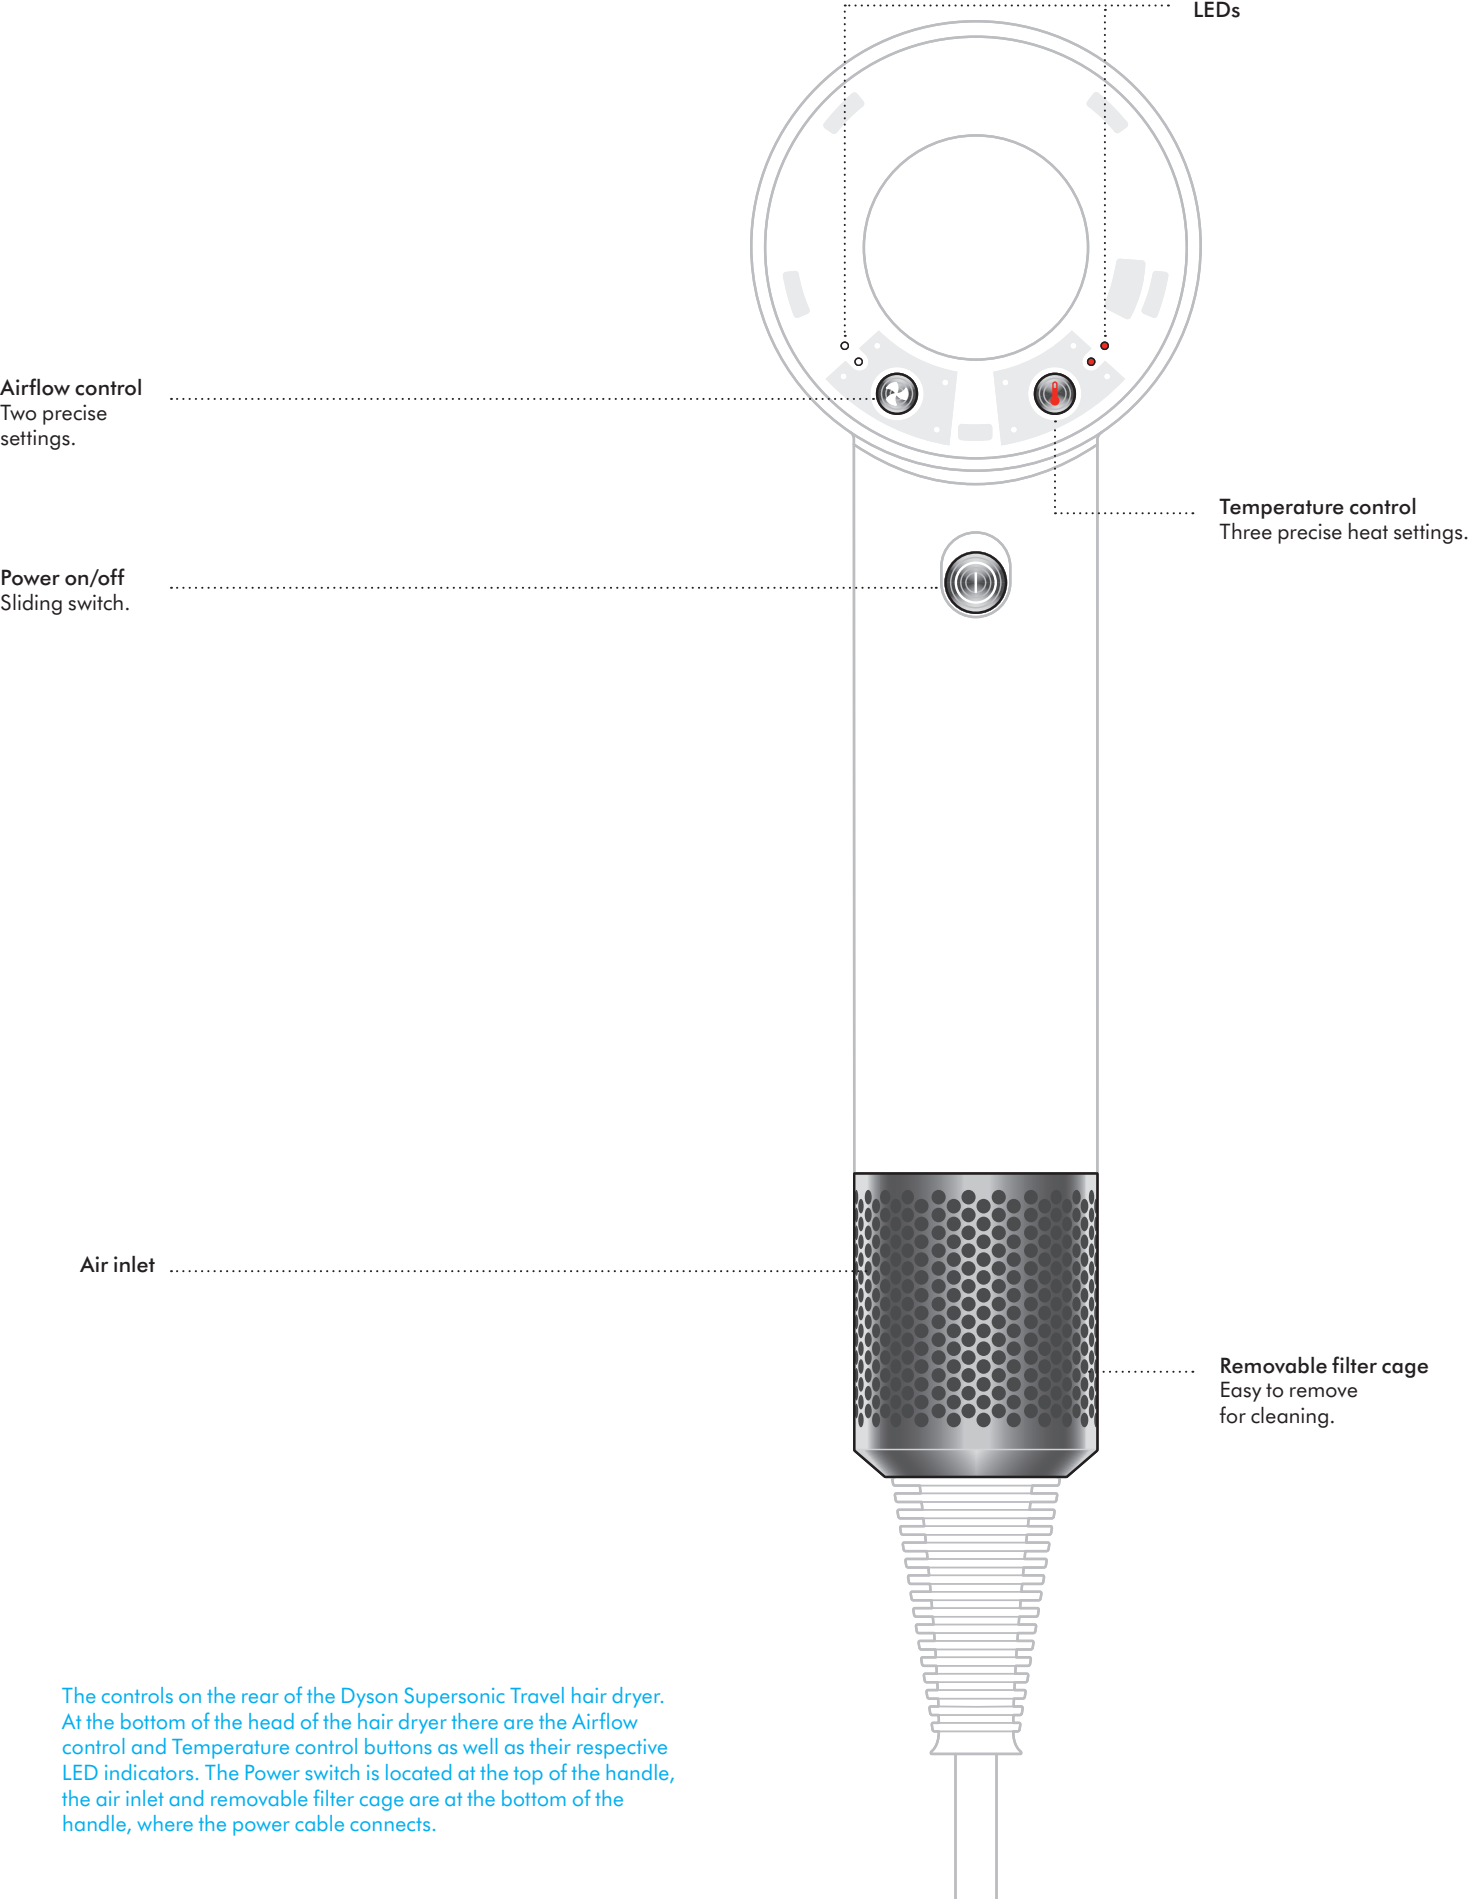

LEDs

Settings


The LED lights indicate which settings you are using.

Airflow

The white lights indicate airflow speed:

Two lights for high.

One light for gentle.

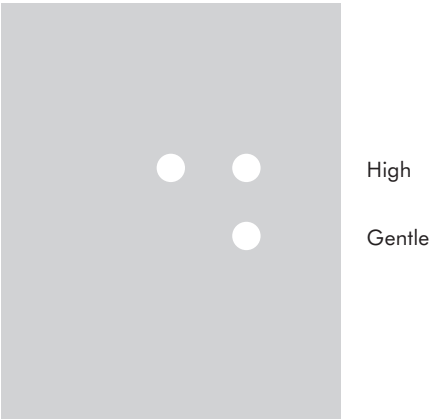

Temperature


The red lights indicate airflow temperature:

Two lights for high.

One light for low.

No lights for cool.

No red LED

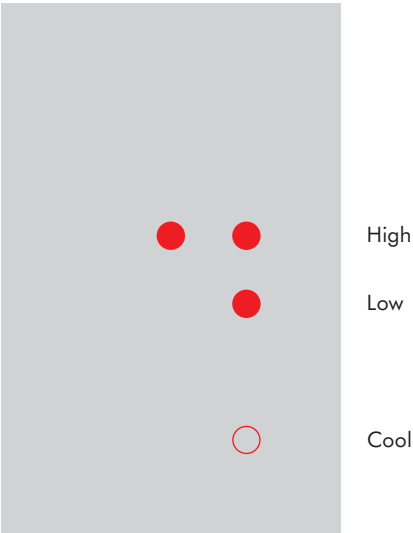

Diagnostics


The LEDs will flash continuously to let you know that your machine needs attention.

If the white lights flash, turn your machine off, clean the filter (see **Regular filter maintenance**) and try turning the machine on again. Watch the video at [Dyson.com/your-supersonic](https://www.dyson.com/your-supersonic) to learn more.

If the red lights are flashing, unplug your machine, wait 30 seconds, and plug it back in.

If both red lights continue to flash, contact Dyson Support.

Don't turn your machine back on.

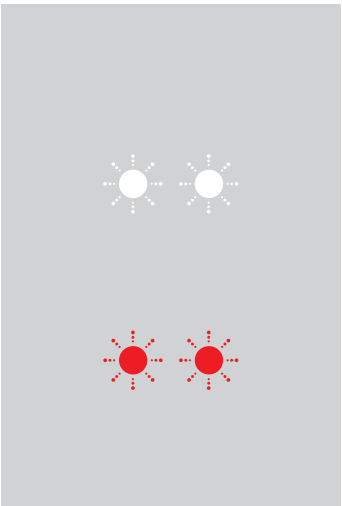

Using your travel hair dryer

 
Your Dyson Supersonic™ Travel hair dryer has magnetic styling attachments, for easy fitting and rotation during styling.

Remove your attachments using the cool edges.

Heat Shield technology keeps the surface of your styling attachments cool.

Styling concentrator

Wider and thinner for precision styling.




Regular filter maintenance

The filter must be cleaned when the white LEDs start flashing.


Ensure that you unplug your appliance from the mains electricity supply and allow to cool down before cleaning your filter.

The Dyson Supersonic™ Travel hair dryer has highly tuned technology to give outstanding performance.

 This technology needs to be kept free from dust and hair product residue. Maintenance is required to maintain performance.




Filter mesh

 

Filter cage

Step 1

Using circular motions and a soft brush or lint-free cloth, clean the filter cage thoroughly.

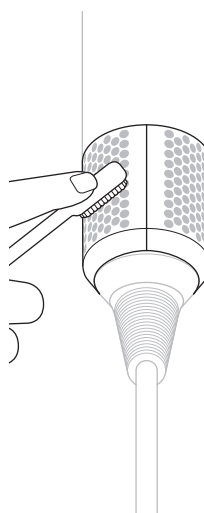

Using your travel hair dryer

 
Your Dyson Supersonic™ Travel hair dryer has magnetic styling attachments, for easy fitting and rotation during styling.

Remove your attachments using the cool edges.

Heat Shield technology keeps the surface of your styling attachments cool.

Smoothing nozzle

Helps create volume and body. Decreases frizz for a smooth, natural look.




Regular filter maintenance

The filter must be cleaned when the white LEDs start flashing.


Ensure that you unplug your appliance from the mains electricity supply and allow to cool down before cleaning your filter.

The Dyson Supersonic™ Travel hair dryer has highly tuned technology to give outstanding performance.

 This technology needs to be kept free from dust and hair product residue. Maintenance is required to maintain performance.




Filter mesh

 

Filter cage

Step 1

Using circular motions and a soft brush or lint-free cloth, clean the filter cage thoroughly.

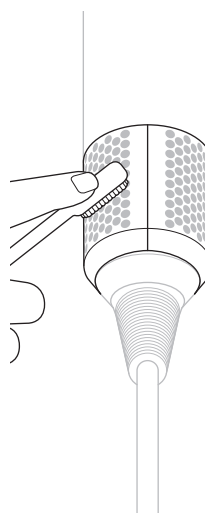


Step 2

Hold the handle of your appliance and pull the filter cage downwards, onto the cable.


Gently pull open the filter cage and slide it off the cable.

**Step 3**

Wash the filter cage under a warm, running tap.

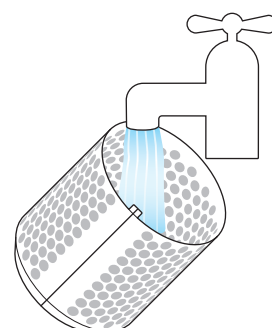**Step 4**


Shake the filter cage to remove the majority of the excess water, then leave to dry naturally.

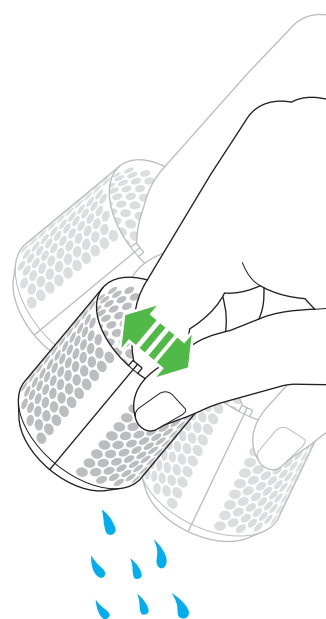

Step 5

Using circular motions and a soft brush or lint-free cloth, clean the filter mesh until all the debris has been removed.

Do not use water or chemicals to clean the filter mesh.

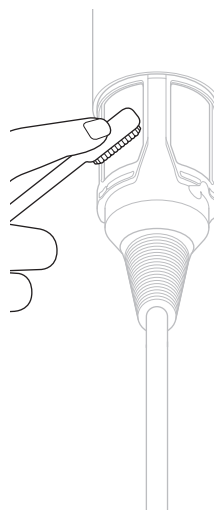


The filter mesh is at the base of your machine's handle and is exposed when the filter cage is removed.

Step 6

Once your filter cage is fully dry, reattach over the filter mesh by gently pulling the filter cage open and sliding it over the cable.

Slide the filter cage towards the handle and push until it clicks into place.

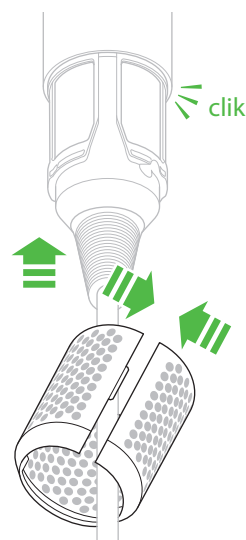

Support and service

Visit [Dyson.com/support](https://www.dyson.com/support) for videos, tips, and spare parts ordering.

Contact Dyson Customer Care for assistance.