dyson lightcycle

دليل التشغيل
Operating manual

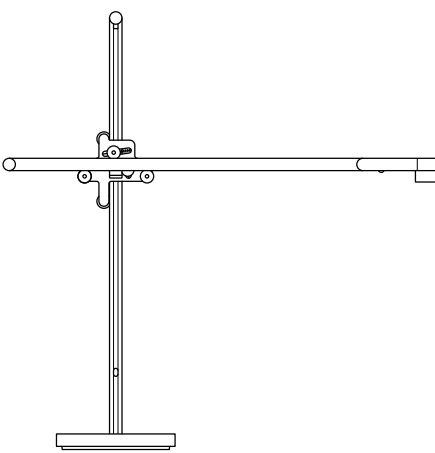

CD04

شكرًا لاختيارك شراء مصباح Dyson.

للاطلاع على الدليل باللغة الإنجليزية، يُرجى الانتقال إلى الصفحة 4

Thank you for choosing to buy a Dyson light

To read your manual in English go to page 29.

AR

المحتويات

البدء

التسجيل 6
إرشادات مهمة للسلامة 8
التركيب 12
مفاتيح التحكم 14
درجة حرارة اللون 16
السطوع 18
الإعدادات 20
تعطيل/ تمكين تقنية Bluetooth® اللاسلكية 22
نقطة شحن USB-C 23

معلومات إضافية

التخلص 26
شروط وأحكام ضمان Dyson لمدة 5 أعوام 26
معلومات مهمة حول حماية البيانات 26
معلومات مهمة 26

شكرًا لاختيارك شراء مصباح Dyson.

قم بتنزيل أحدث إصدار من تطبيق Dyson Link من App Store أو Google Play.
افتح التطبيق واتبع التعليمات المعروضة على الشاشة للاتصال بنظام الإضاءة لديك.

عبر الإنترنت

االسعودية www.sa.dyson.com/support
الامارات العربية المتحدة www.dyson.ae/support

عبر الهاتف

السعودية 00966122877657
الإمارات العربية المتحدة 0097143592184
مفتوح: الأحد - الخميس 9:00 إلى 17:00

GET IT ON Google Play

Download on the App Store

يُعد كل من Apple وشعار Apple علامتين تجاريتين لشركة Apple Inc. مسجَّلتين في الولايات المتحدة والبلدان الأخرى. كما يمثل App Store علامة خدمة لشركة Apple Inc. مسجَّلة في الولايات المتحدة والبلدان الأخرى.
أما Google Play وشعار Google Play، فهما علامتان تجاريتان لشركة Google Inc.

إن علامة كلمة ®Bluetooth وشعاراتها هي علامات تجارية مسجلة مملوكة لشركة Bluetooth SIG, Inc. ويخضع أي استخدام لهذه العلامات من قبل Dyson للترخيص.

التسجيل

بعد تسجيل ضمانك المجاني لمدة خمسة أعوام، سوف يكون جهاز Dyson مشمولاً بضمان لمدة خمسة أعوام على الأجزاء والتشغيل من تاريخ الشراء، وفقًا لشروط الضمان. إذا كانت لديك أية أسئلة عن جهاز Dyson، فيُرجى الاتصال بخط المساعدة التابع لشركة Dyson مع تقديم الرقم المسلسل والتفاصيل المتعلقة بمكان ووقت شراء الجهاز. يمكن حل أغلب الأسئلة عبر الهاتف بمعرفة أحد ممثلي خط المساعدة المدربين بشركة Dyson.

يمكنك العثور على الرقم المسلسل على قاعدة المصباح.

تفضل بزيارة www.sa.dyson.com أو www.dyson.ae للحصول على مساعدة، ومقاطع فيديو داعمة، ونصائح عامة ومعلومات مفيدة حول Dyson عبر الإنترنت.

دوّن الرقم المسلسل للرجوع إليه في المستقبل.

تم تقديم هذا الرسم التوضيحي على سبيل المثال فقط.

التسجيل باستخدام هاتفك الذكي
قم بتنزيل تطبيق Dyson Link وسيتم توجيهك لخطوات التسجيل أثناء عملية الإعداد.

التسجيل عبر الإنترنت
تفضّل بزيارة موقعنا الإلكتروني لتسجيل ضمان لكافة قطع الغيار والخدمة عبر الإنترنت.
السعودية: www.sa.dyson.com
الإمارات العربية المتحدة: www.dyson.ae

التسجيل عبر الهاتف
اتصل بخط المساعدة المخصص لدينا.
مفتوح: الأحد - الخميس ٩:٠٠ إلى ١٧:٠٠
السعودية:
٠٠٩٦٦١٢٢٨٧٧٦٥٧
الإمارات العربية المتحدة:
٠٠٩٧١٤٣٥٩٢١٨٤

إرشادات مهمة للسلامة

قبل إستخدام هذا المصباح، إقرأ كافة الإرشادات والعلامات التحذيرية الواردة في هذا الكتيب وعلى المصباح

عند استخدام أي جهاز كهربي، ينبغي دومًا اتباع الاحتياطات الأساسية، بما في ذلك ما يلي:

⚠ تحذير

تنطبق هذه التحذيرات على المصباح، كما تنطبق حسب مقتضى الحال على أجهزة الشحن أو مهايئات التيار.

للحد من خطر نشوب حريق أو حدوث صدمة كهربائية أو إصابة بدنية:

١. لا يمكن استخدام مصباح Dyson من قِبل الأشخاص ذوي القدرات البدنية أو الحسية أو العقلية المحدودة، أو الذين يفتقرون إلى الخبرة والمعرفة، إلا إذا تم تقديم الإشراف أو التوجيه إليهم من شخص مسؤول بشأن استخدام المصباح بطريقة آمنة وفهم المخاطر التي قد تنجم عن هذا الاستخدام. ينبغي ألا يقوم الأطفال بتنظيف المصباح أو صيانته.
٢. لا تسمح باستخدامه كلعبة. من الضروري الانتباه جيدًا عند استخدام المصباح بالقرب من الأطفال.
٣. تأكد من تركيب أجزاء المصباح بالكامل وفقًا للتعليمات قبل استخدامه.
٤. مناسب للاستخدام داخل المباني فقط (عند درجة حرارة 0 مئوية (32 فهرنهايت) – 40 مئوية (104 فهرنهايت).

٥. إحرص على استخدام المصباح وفقًا لما هو موضح في كتيب تشغيل Dyson فقط. لا تقم بإجراء أي عملية صيانة بخلاف التي ينصح بإجرائها خط المساعدة التابع لشركة Dyson.
٦. إذا لم يعمل المصباح كما يجب، أو تلقى ضربة قوية أو سقط أو تلف أو تُرك في مكان مكشوف أو سقط في الماء، فلا تستخدمه واتصل بخط المساعدة التابع لشركة Dyson.
٧. إذا كان المصباح بحاجة إلى الصيانة أو الإصلاح، فيرجى الاتصال بخط المساعدة التابع لشركة Dyson بحيث يمكننا مناقشة الخيارات المتاحة. لا تقم بفك المصباح حيث إن إعادة تركيبه بطريقة غير صحيحة قد تؤدي إلى حدوث صدمة كهربية أو نشوب حريق.
٨. لا تتعامل مع أي جزء من المصباح أو الكابل أو القابس بيدين مبتلتين.
٩. لا تستخدم الجهاز في حالة وجود تلف في الكابل أو المقبس. وإذا كان هناك تلف في كابل الكهرباء، يجب استبداله بمعرفة شركة دايسون أو وكيل الصيانة التابع لها أو أي أشخص يتمتع بدرجة مشابهة من التأهيل، لتجنب التعرض لأي خطر.
١٠. تجنّب شدّ الكبل أو الضغط عليه بقوة. واحرص على إبعاد الكبل عن الأسطح الساخنة.
١١. لا تضع الكبل أسفل السجاد. تجنّب تغطية الكبل بالسجاد أو المشايات أو ما شابه ذلك. ضع الكبل بعيداً عن مناطق السير في مكان لا يتعثر المارة به.
١٢. لا تفصل الجهاز عن طريق شدّ الكبل. ولفصل الطاقة، أمسك القابس وليس الكبل. لا يُنصح باستخدام سلك تطويل.
١٣. أوقف تشغيل مفاتيح التحكم قبل فصل الجهاز. افصل الجهاز عن المقبس في حالة عدم استخدامه لفترات طويلة. لتجنب خطر التعثر، قم بلف الكبل.
١٤. تجنّب استخدامه بالقرب من الأفران أو المواقد أو المصادر الأخرى مرتفعة الحرارة.

١٥. المصباح غير قابل للاستبدال؛ عندما يصل المصباح إلى نهاية عمره يُستبدل بالكامل. الاستبدال نتيجة نهاية العمر غير مشمول بالضمان.

إقرأ هذه الإرشادات واحتفظ بها

التركيب

١

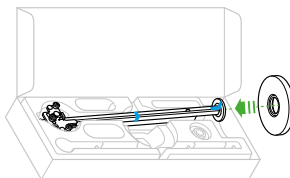

٢

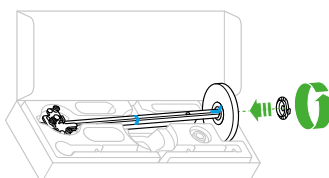

٣

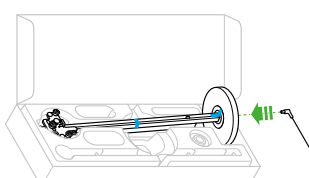

٤

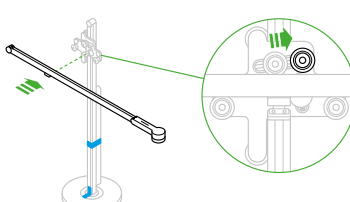

من المهم أن يتم تركيب المصباح في الصندوق على النحو المبين.
للا تقم بإزالة شريط النقل حتى يتم تركيب المصباح بالكامل.

٥

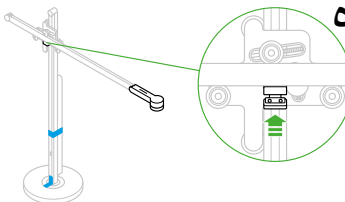

٦

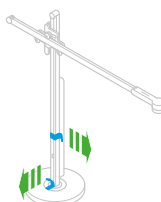

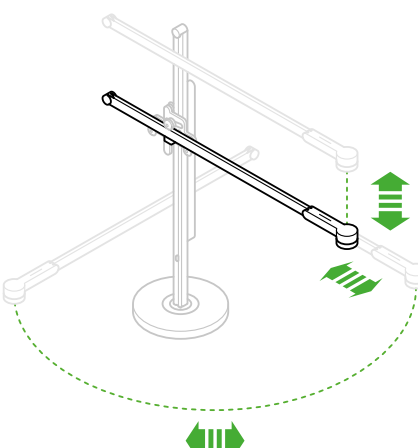

مفاتيح التحكم

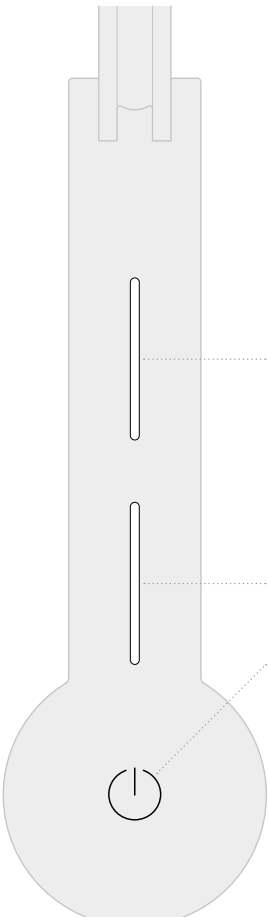

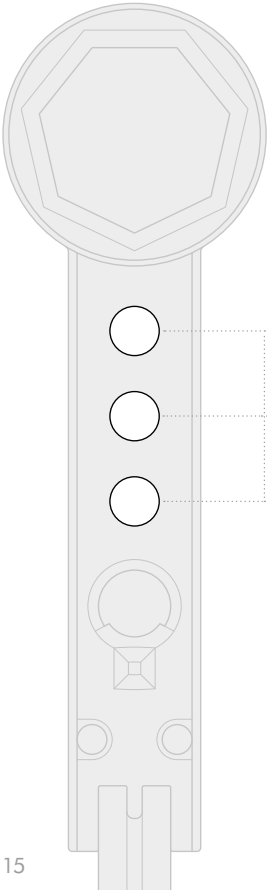
الإعدادات

درجة حرارة اللون

اسحب لتغيير درجة حرارة لون المصباح من الدافئة إلى الباردة.

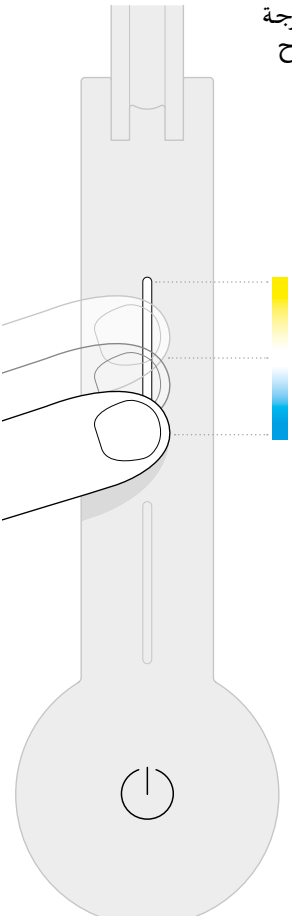

لمعرفة المزيد عن درجات حرارة لون الإضاءة ولتحقيق أقصى استفادة ممكنة من نظام الإضاءة لديك، يُرجى الانتقال إلى تطبيق Dyson Link أو عبر الإنترنت على www.sa.dyson.com (المملكة العربية السعودية) أو www.dyson.ae (الإمارات العربية المتحدة).

اضغط للتغيير بسرعة بين درجات حرارة اللون.

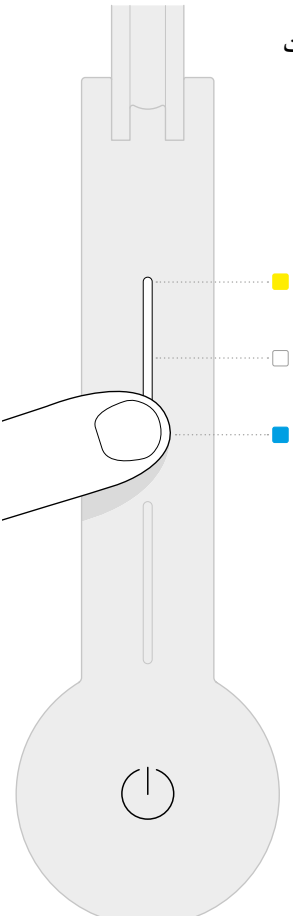

السطوع

إسحب لتغيير
سطوع الضوء.

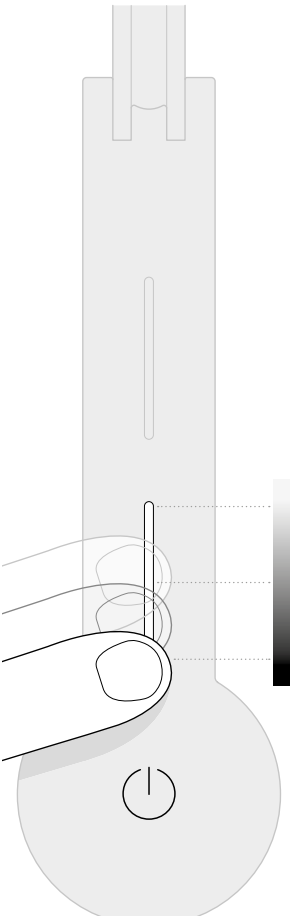

لمعرفة المزيد عن مستويات السطوع ولتحقيق أقصى استفادة ممكنة من نظام الإضاءة لديك، يُرجى الانتقال إلى تطبيق Dyson Link أو عبر الإنترنت على www.sa.dyson.com (المملكة العربية السعودية) أو www.dyson.ae (الإمارات العربية المتحدة).

إضغط للتغيير بسرعة بين مستويات السطوع.

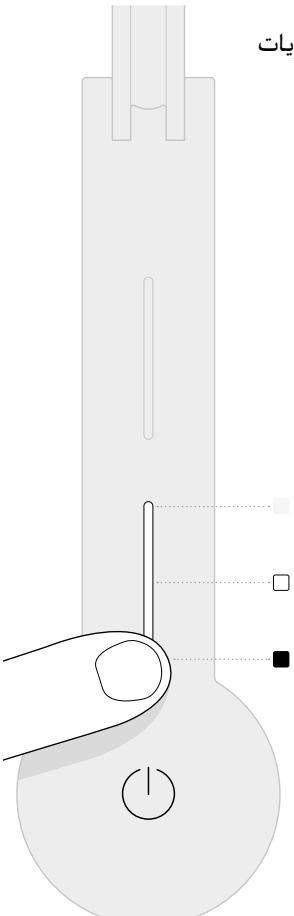

الإعدادات

يمكنك تغيير السطوع واللون تلقائيًّا حسب موقعك الجغرافي في أي وقت خلال اليوم عند الاتصال عن طريق Bluetooth® بتطبيق Dyson Link.

سيتوقف المصباح عن التشغيل بعد دقيقتين إذا لم يتم اكتشاف وجود شخص ما في المكان.

AUTO

سيتكيف المصباح مع ظروف الإضاءة الخلفية وسيحافظ على مساحة العمل في سطوع ثابت.

لمزيد من المعلومات حول استخدام نظام الإضاءة لديك من دون الاتصال بتطبيق Dyson Link:
السعودية www.sa.dyson.com/support
الإمارات العربية المتحدة www.dyson.ae/support

لمعرفة المزيد عن الإعدادات ولتحقيق أقصى استفادة ممكنة من نظام الإضاءة لديك، يُرجى الانتقال إلى تطبيق Dyson Link أو عبر الإنترنت على www.sa.dyson.com (المملكة العربية السعودية) أو www.dyson.ae (الإمارات العربية المتحدة).

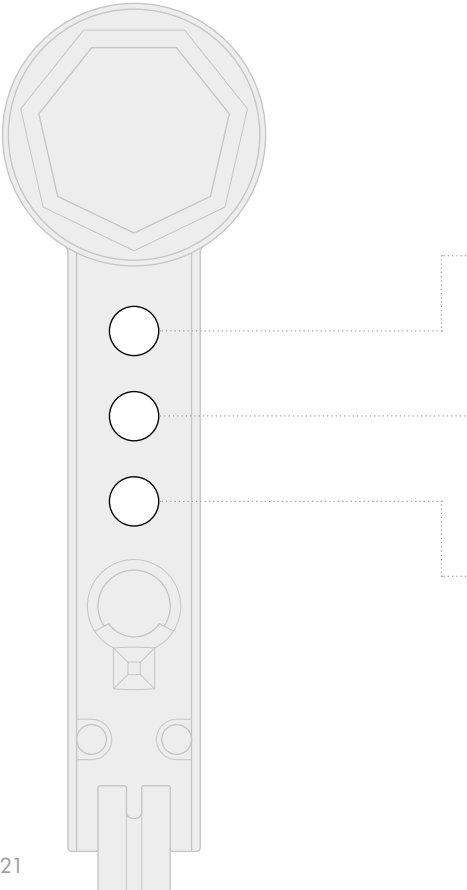

تعطيل/ تمكين تقنية Bluetooth® اللاسلكية

يتم تمكين تقنية Bluetooth® اللاسلكية افتراضيًّا في المصباح.

اضغط مع الاستمرار على الزر الموجود في المنتصف حتى تومض مصابيح LED الموجودة على الأزرار الثلاثة. سينطفئ مصدر الإضاءة الرئيسي ثم يضيء مرة أخرى للإشارة إلى تعطيل Bluetooth.

لإعادة تمكين Bluetooth، قم بتكرار الإرشادات أعلاه. سيومض مصدر الإضاءة الرئيسي مرتين للإشارة إلى إعادة تمكين Bluetooth.

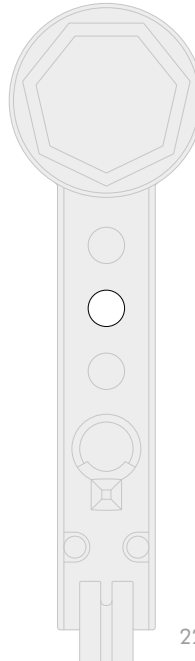

نقطة شحن
USB-C

Type C

وصّل أجهزتك المحمولة
لشحنها إلى 1.5 أمبير
عند 5 فولت

معلومات إضافية

الاتصال بتطبيق DYSON LINK

- تبذل شركة Dyson قصارى جهدها لضمان توافق تقنيتنا مع أنظمة التشغيل الحديثة ولكننا لا نضمن ذلك .إذا كانت لديك أي أسئلة أخرى أو كنت ترغب في مراجعة أحدث معلومات التوافق ،فيُرجى الاتصال بخط المساعدة التابع لشركة Dyson.
- يجب أن يتضمن هاتفك المحمول دعم Bluetooth 4.0)البلوتوث منخفض الطاقة (من أجل إعداد الاتصال بنظام الإضاءة .راجع مواصفات جهازك للتحقق من التوافق.

التخلص

- منتجات دايسون مصنوعة من مواد عالية الجودة قابلة لإعادة التدوير. لذلك عليك بإعادة تدويرها كلما كان ذلك ممكنًا.
- تخلص من المنتج وفقًا للقوانين أو اللوائح المحلية.

ضمان محدود لمدة 5 أعوام

شروط وأحكام ضمان DYSON المحدود لمدة 5 أعوام

البنود المشمولة بالضمان

- يتم إصلاح مصباح Dyson أو استبداله (وفقًا لتقدير شركة Dyson) إذا تبين أنه معيب نتيجة وجود خلل في المواد أو الصنع أو الوظائف خلال 5 أعوام من تاريخ الشراء أو التسليم (إذا لم يعد أي جزء متوفرًا أو لم يعد يتم تصنيعه، فتلتزم شركة Dyson باستبداله بجزء يعمل).
- لن يكون هذا الضمان ساريًا إلا إذا تم استخدام المصباح في البلد الذي بيع فيه.

البنود غير المشمولة بالضمان

لا تضمن شركة Dyson إصلاح المصباح أو استبداله إذا كان العطل نتيجة لما يلي:

- التلف الناتج عن عدم تنفيذ أي صيانة موصى بها للمصباح.

- التلف العرضي والأعطال الناجمة عن الإهمال في الاستخدام أو العناية بالمصباح أو إساءة استخدام المصباح أو إهماله أو تشغيله أو التعامل معه بشكل لا يتوافق مع كتّيب التشغيل من Dyson.
- استخدام المصباح لأغراض أخرى بخلاف الاستخدام المخصص له.
- استخدام أجزاء لم يتم تجميعها أو تركيبها وفقًا لتعليمات Dyson.
- استخدام أجزاء وملحقات ليست من المكونات الأصلية التابعة لشركة Dyson.
- التركيب الخاطئ لمكونات الجهاز (إلا إذا تم تركيبه بواسطة Dyson).
- تنفيذ الإصلاحات والتبديلات بواسطة أطراف أخرى غير Dyson أو أي من وكلائها المعتمدين.
- البلى والتقادم المعتاد (مثل قاطع التيار أو ذراع الفرشاة وما إلى ذلك).

إذا كانت لديك أي شكوك حول ما يغطيه الضمان، يُرجى الاتصال بخط المساعدة التابع لشركة Dyson.

ملخّص تغطية الضمان

- يصبح الضمان ساريًا من تاريخ الشراء (أو تاريخ التسليم إذا كان هذا التاريخ لاحقًا).
- يجب عليك تقديم ما يثبت (سواء المصباح الأصلي أو أي من ملحقاته التي اشتريتها بعد ذلك) عملية التسليم/ الشراء قبل تنفيذ أي أعمال على مصباح Dyson. ومن دون هذا الإثبات، ستتحمل دفع نفقات أي أعمال يتم إجراؤها. ويجب عليك الاحتفاظ بقسيمة الشراء أو إشعار التسليم.
- سيتم تنفيذ كافة الأعمال بمعرفة شركة Dyson أو أي من وكلائها المعتمدين.
- أي أجزاء يتم استبدالها بمعرفة Dyson تصبح مملوكة لها.
- إصلاح مصباح Dyson أو استبداله وهو لا يزال في فترة الضمان لن يمد فترة الضمان.
- يوفر الضمان مزايا مضافة إلى المنتج ولا يؤثر في أي حقوق قانونية قد تتمتع بها كمستهلك.

معلومات مهمة عن حماية البيانات

ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية عند تسجيل منتج Dyson الخاص بك أو تطبيق Dyson Link;

عند التسجيل عبر تطبيق DYSON LINK

ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية لتسجيل تطبيق Dyson Link، هذا يمكّننا من ربط منتجك بأمان بمثيل التطبيق لديك.

عند تسجيل مصباح DYSON الخاصة بك

- ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية لتسجيل منتجك وتمكيننا من دعم الضمان الخاص بك
- عند التسجيل، سيكون لديك الفرصة لاختيار ما إذا كنت ترغب في تلقي رسائل منا أم لا. إذا وافقت على تلقي رسائل من Dyson، فسنرسل لك تفاصيل العروض الخاصة والأخبار المتعلقة بأحدث الابتكارات لدينا. نحن لا نبيع مطلقًا معلوماتك إلى جهات أخرى كما أننا نستخدم المعلومات فقط التي تشاركها معنا على النحو الذي تحدده سياسات الخصوصية لدينا المتوفرة على موقع الويب الخاص بنا
privacy.dyson.com

Thank you for choosing to buy a Dyson light

Download the latest Dyson Link app from the App Store or Google Play.
Open the app and follow the on screen instructions to connect to your light.

Online

SA: www.sa.dyson.com/support
UAE: www.dyson.ae/support

On the phone:

SA: 00966122877657
UAE: 0097143592184
Sun - Thur 9:00 to 17:00

Download on the App Store

GET IT ON Google Play

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc.

The Bluetooth® word mark and logos are registered trade marks owned by the Bluetooth SIG, Inc. and any use of such marks by Dyson is under license.

EN
Contents

Getting started

31 Registration
33 Important safety instructions
35 Assembly
37 Controls
39 Colour temperature
41 Brightness
43 Settings
45 Disabling/Enabling Bluetooth® wireless technology
44 USB-C Charging point

Additional information

47 Dyson Link app connectivity
47 Disposal
47 Terms and conditions of the Dyson 5 year guarantee
46 Important data protection information
46 Important information

Register with your smartphone
Download the Dyson Link app and you will be taken through registration as part of the set up.

Register online
Visit our website to register your full parts and labour guarantee online.
www.dyson.ae
www.sa.dyson.com

Register by phone
Call our dedicated Helpline.
Open: Sun - Thur 9:00 to 17:00
SA: 00966122877657
UAE: 0097143592184

Registration

After registering your 5 year guarantee, your Dyson light will be covered for parts and labour for 5 years from the date of purchase, subject to the terms of the guarantee. If you have any questions about your Dyson light, call the Dyson Helpline with your serial number and details of where and when you bought the light. Most questions can be solved over the phone by one of our trained Dyson Helpline staff.

Your serial number can be found on the base of the light.

Visit www.sa.dyson.com (SA) or www.dyson.ae (UAE) for online help, support videos, general tips and useful information about Dyson.

Note your serial number for future reference.

This illustration is for example purposes only.

7. If a service or repair is needed, contact the Dyson Helpline so we can discuss the available options. Do not disassemble the light as incorrect reassembly may result in an electric shock or fire.
8. Do not handle any part of the light, cable or plug with wet hands.
9. Do not use with a damaged cable or plug. If the supply cable is damaged it must be replaced by Dyson, its service agent or similarly qualified persons in order to avoid a hazard.
10. Do not stretch the cable or place the cable under strain. Keep cable away from heated surfaces.
11. Do not run cable under carpeting. Do not cover cable with throw rugs, runners or similar coverings. Arrange cable away from traffic area and where it will not be tripped over.
12. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable. The use of an extension cable is not recommended.
13. Turn off all controls before unplugging. Unplug from socket when not in use for extended periods. To avoid a tripping hazard, safely coil the cable.
14. Do not use near furnaces, fireplaces, stoves or other high temperature heat sources.
15. The light source is not replaceable; when the light source reaches its end of life, the whole light shall be replaced. End of life replacement is not covered under the guarantee.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING THIS LIGHT READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE LIGHT

When using any electrical appliance, basic precautions should always be followed, including the following:

⚠ WARNING

These warnings apply to the light, and also where applicable to chargers or mains adaptors.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

1. This Dyson light can be used by persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the light in a safe way and understand the hazards involved. Cleaning and maintenance shall not be performed by children.
2. Do not allow to be used as a toy. Close attention is necessary when the light is used near children.
3. Ensure light is fully assembled in line with the instructions before use.
4. Suitable for indoor use only 0°C (32°F) – 40°C (104°F).
5. Use only as described in this Dyson Operating Manual. Do not carry out any maintenance other than that advised by the Dyson Helpline.
6. If the light is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Dyson Helpline.

It is important that the light is assembled in the box as shown.
Do not remove the transit tape until the light is fully assembled.

5

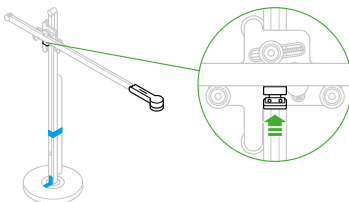

6

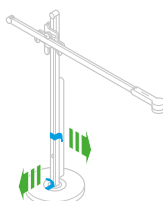

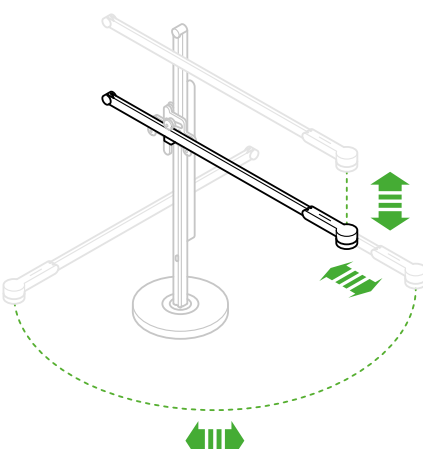

Assembly

1

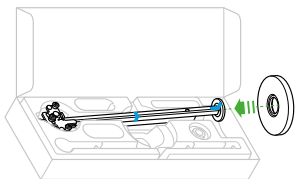

2

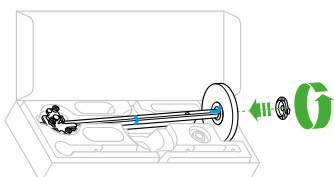

3

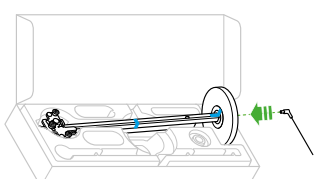

4

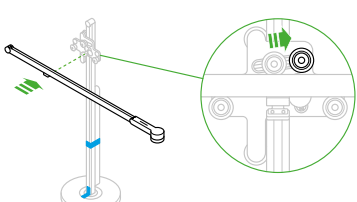

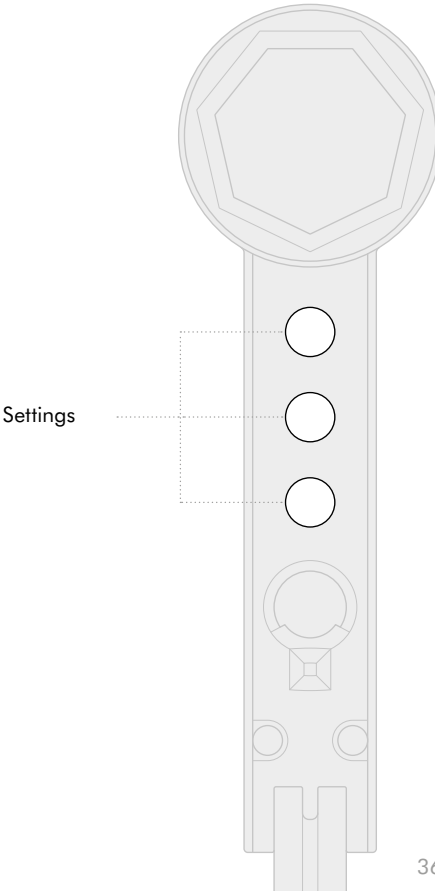
Settings

Controls

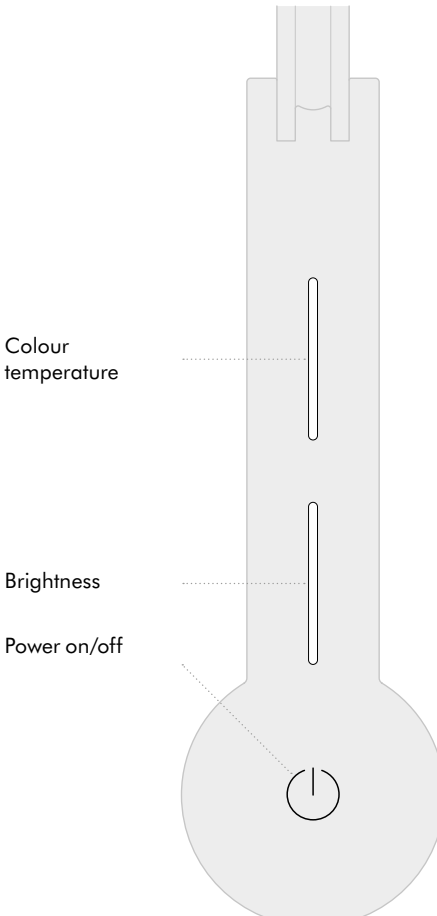

To find out more about colour temperatures of light, and to get the most from your light, go to the Dyson Link app or online at www.sa.dyson.com (SA) or www.dyson.ae (UAE).

Tap to change quickly between colour temperatures.

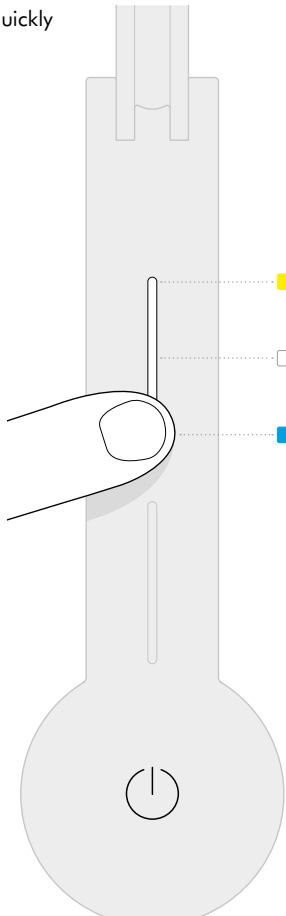

Colour temperature

Swipe to change the colour temperature of the light from warm through to cool.

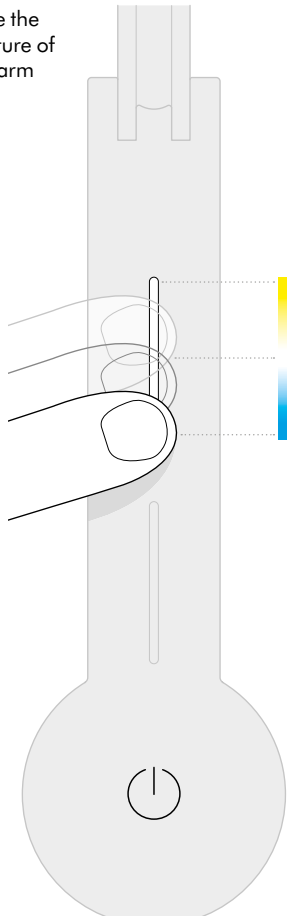

To find out more about brightness levels and to get the best from your light, go to the Dyson Link app or online at www.sa.dyson.com (SA) or www.dyson.ae (UAE).

Tap to change quickly between brightness levels.

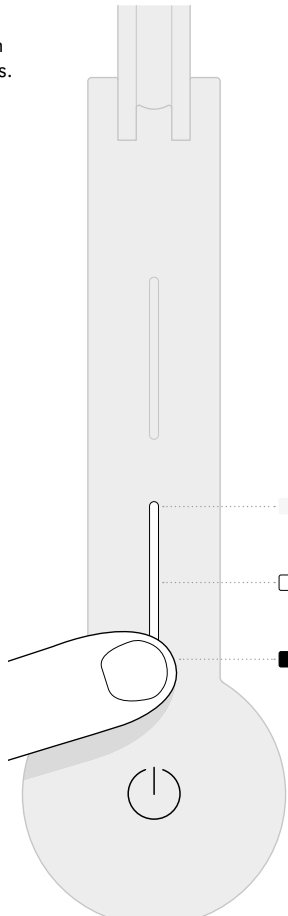

Brightness

Swipe to change the brightness of the light.

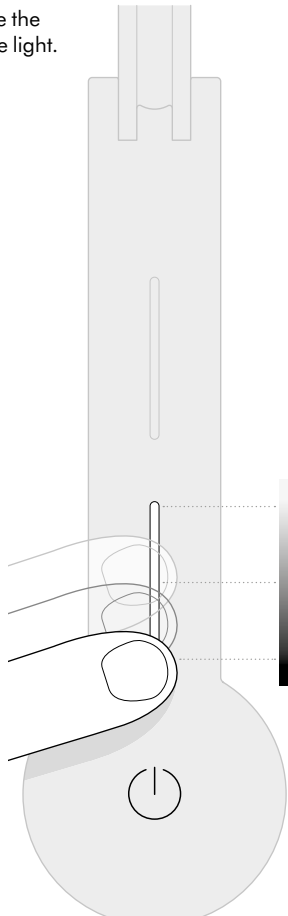

To find out more about settings, and to get the most from your light, go to the Dyson Link app or online at www.sa.dyson.com (SA) or www.dyson.ae (UAE).

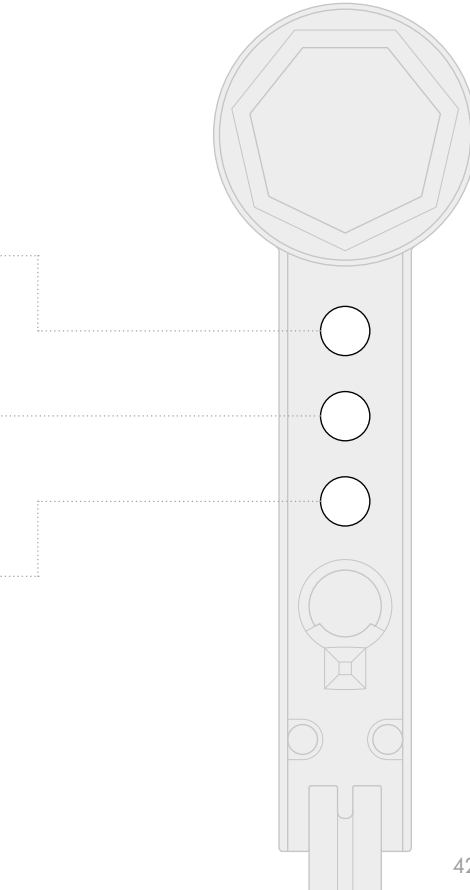

Settings

Automatically changes the brightness and colour, according to your geographical location, throughout the day when connected by Bluetooth® wireless technology to the Dyson Link app.

The light will turn off after 2 minutes if no presence is detected.

AUTO

The light will adjust to background light conditions and keep the workspace at a constant brightness.

For more information about using your light without connecting to the Dyson Link app:
SA: www.sa.dyson.com/support
UAE: www.dyson.ae/support

USB-C charging point

Type C

Plug in your mobile devices to charge up to 1.5A at 5V.

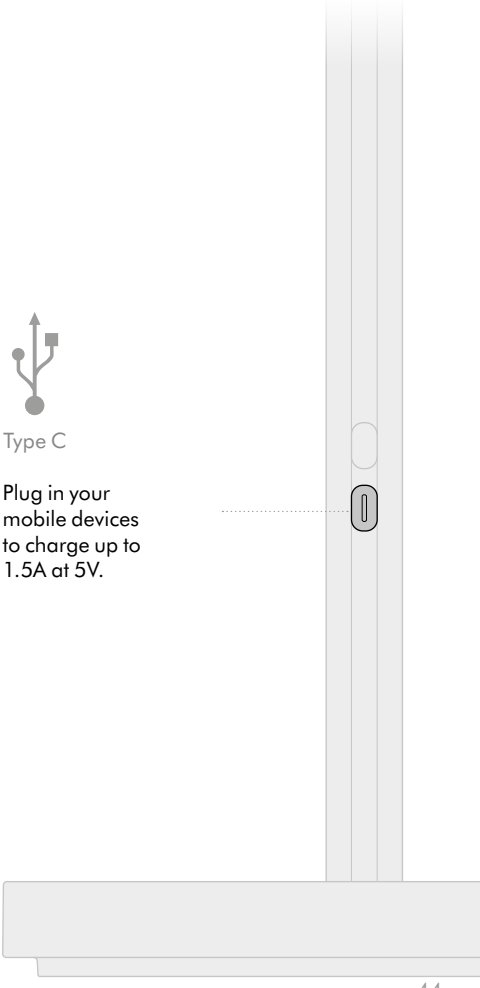

Disabling/Enabling Bluetooth® wireless technology

The light has Bluetooth® wireless technology enabled by default.

Press and hold the middle button until the LED lights on the three buttons blink. The main light source will turn off and then on again to show that Bluetooth has been disabled.

To re-enable Bluetooth, repeat the instructions above. The main light will blink twice to show that Bluetooth has been re-enabled.

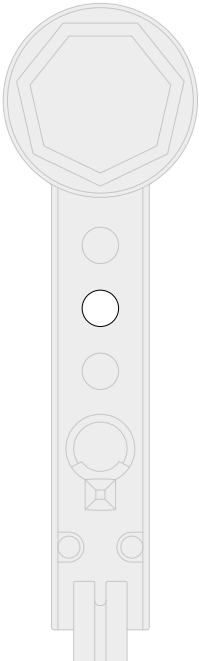

- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Normal wear and tear (e.g. fuse etc.).

If you are in any doubt as to what is covered by your guarantee, please contact the Dyson Helpline.

SUMMARY OF COVER

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson light. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson light under guarantee will not extend the period of guarantee.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer.

IMPORTANT DATA PROTECTION INFORMATION

You will need to provide us with basic contact information when you register your Dyson Product or the Dyson Link app;

WHEN REGISTERING VIA THE DYSON LINK APP

You will need to provide us with basic contact information to register the Dyson Link app; this enables us to securely link your product to your instance of the app.

WHEN REGISTERING YOUR DYSON LIGHT:

- You will need to provide us with basic contact information to register your product and enable us to support your guarantee.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations. We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website privacy.dyson.com

Additional information

DYSON LINK APP CONNECTIVITY

- Dyson endeavours to ensure that our technology is compatible with current operating systems but this is not guaranteed. If you have any questions or would like to check the latest compatibility, please contact the Dyson Helpline.
- Your mobile device must have Bluetooth 4.0 support (Bluetooth Low Energy) in order to set up a connection with the light. Check your device specification for compatibility.

DISPOSAL

- Dyson products are made from high grade recyclable materials. Recycle where possible.
- Dispose in accordance with local ordinances or regulations.

LIMITED 5 YEAR GUARANTEE

TERMS AND CONDITIONS OF THE DYSON 5 YEAR LIMITED GUARANTEE.

WHAT IS COVERED

- The repair or replacement of your Dyson light (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within 5 years of purchase or delivery (if any part is no longer available or out of manufacture Dyson will replace it with a functional replacement part).
- This guarantee will only be valid if the light is used in the country in which it was sold.

WHAT IS NOT COVERED

Dyson does not guarantee the repair or replacement of a light where a defect is the result of:

- Damage caused by not carrying out any recommended maintenance of the light.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, carelessness or operation or handling of the light which is not in accordance with the Dyson Operating Manual.
- Use of the light for anything other than the use it is designed for.

العناية بعملاء Dyson

إذا لديك استفسار حول مصباح Dyson، فيرجى الاتصال بخط المساعدة التابع لشركة Dyson مع تقديم الرقم المسلسل والتفاصيل المتعلقة بمكان ووقت شراء المصباح، أو الاتصال بنا عبر موقع Dyson على الويب.

Dyson customer care

If you have a question about your Dyson light, call the Dyson Helpline with your serial number and details of where and when you bought the light, or contact us via the Dyson website.

AE
www.dyson.ae
+971 (0)4 359 2184
dysonprofessionalmea@dyson.com
SA
www.sa.dyson.com
00966122877657
wpam.hygiene@rezagroup.com

www.dyson.ae
www.sa.dyson.com

JN.94665 PN.267464-17-02 11.12.18